

# User Preferences

## System Settings

Use the following codes to set, reset, or display firmware version.

	Reset (return to factory default)
	Display firmware version

## Beep Settings

Use the following codes to change beep settings.

	Medium beeper tone
	Low beeper tone
	High beeper tone
	Speaker disable
	Long sound duration (100msec)
	Medium sound duration(50msec)